



Register the Air Fill Manifold

Watch the how to video at Oceanid.com on the Support tab



Once you have aligned the AFM to the RDC as shown in the support video, use the provided roll of vinyl tape to secure the rotational position of the Valve Adapters to the air fill tubes. Ten wraps around each fill tube / valve adapter juncture will secure the rotational position and insure that the valve adapter is not pulled off of the end of the fill tube.

Please contact us with any comments or questions. 208.322.3600